

GEORGE KINI

*Thank you for purchasing George Kini watches!
I am sure they will give you a lot of wonderful moments and the
attention of others.*


*If you have questions or wishes, you are always welcome to write at
kini@georgekini.com. Create with us!*

A stylized, handwritten signature in black ink, appearing to read 'George Kini'. The signature is fluid and cursive, with a long horizontal stroke extending to the right.

George Kini

All George Kini watches are equipped with high-precision Seiko, Miyota and ISA movements.


Below you will find instructions on how to operate your watch and warranty service conditions.

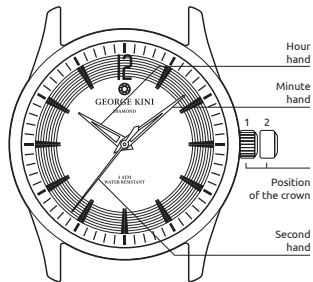

3-HANDS MODELS

To set time:

1. Pull the crown, bring it to position **2**.
2. Rotate the crown in any direction until the correct time is set.
3. Push the crown in to the position **1**.

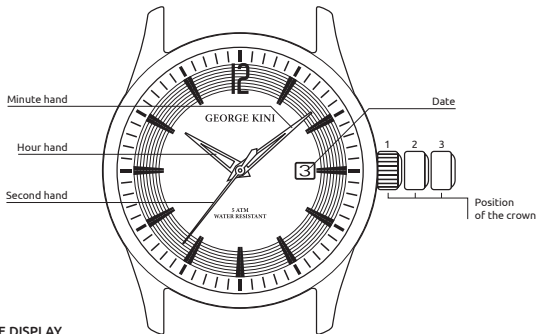

**MODELS
WITH DATE DISPLAY**

MODELS WITH DATE DISPLAY

To set time:


1. Pull the crown, bring it to position **3**.
2. Rotate the crown in any direction until the correct time is set.
3. Push the crown in to the position **1**.

To set calendar/date:

1. Pull the crown, bring it to position **3**.
2. Turn the crown counterclockwise until the correct date appears.
3. Push the crown in to the position **1**.

PLEASE NOTE:

The date advances automatically once a day. To avoid the damage of the movement, please do not set the date between 23:00-4:00.

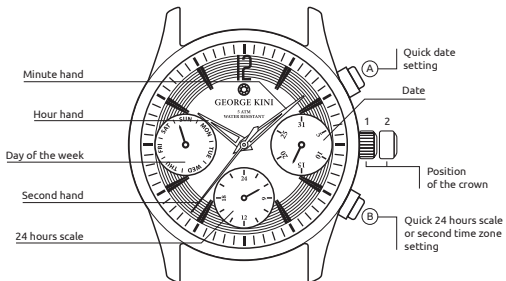

**MULTIFUNCTIONAL
MODELS**

MULTIFUNCTIONAL MODELS

To set time:

1. Pull the crown, bring it to position **2**.
2. Rotate the crown clockwise to set the correct time.
3. Push the crown in to the position **1**.

To set the second time zone:

1. A hand in the button part of the dial can represent current time in 24 hours format or the time in another time zone.
2. To set the time on the smaller dial check that the crown is placed in position **1**.
3. Press the button **B** until the right time is set.

To set date:


1. The hand on the right side of the dial shows the day of the months.
2. To set date please check that the crown is placed in position **1**.
3. Press the button A until the correct date is set.

To set day of the week:

1. Place the crown to the position **2**.
2. Rotate the crown clockwise until the hand on the small dial in the left shows the actual day of the week.
3. Push the crown in to the position **1**.

PLEASE NOTE:

To avoid the damage of the movement, please do not set the date between 23:00-4:00.

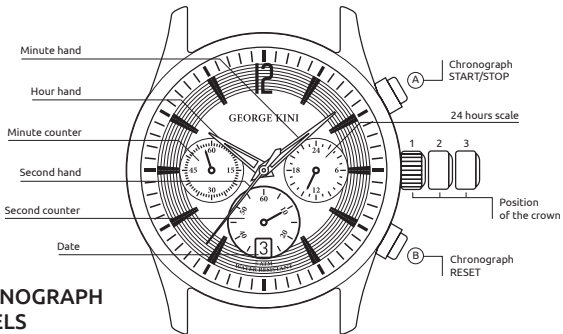

CHRONOGRAPH MODELS

The watches with a chronograph have three functions: TIME, CALENDAR, STOPWATCH

TIME

To set time:

1. Place the crown to the position **3**.
2. Rotate the crown in any direction until the correct time is set.
3. Push the crown in to the position **1**.

CALENDAR

To set calendar:

1. Place the crown to the position **2**.
2. Rotate the crown clockwise for calendar setting.
3. Push the crown in to the position **1**.

PLEASE NOTE:

To avoid the damage of the movement, please do not set the date between 23:00-4:00.

STOPWATCH


A stopwatch can measure the time interval up to 1 hour in increments of 1/1 second. The minute hand of the stopwatch is synchronized with its second hand.

1. To start countdown press button **A**.
2. To stop the counting press button **A** once again.
3. Press button **B** to reset.

Setting the stopwatch hands:

If after returning of the stopwatch hands to the starting position it turns out that they are not in position 12 or 0 hours, set them in the following way:

1. Pull the crown, bring it to position **3**.
2. Press and hold the button **A**, the hands will start moving counterclockwise fast. Then, start pressing the button **A** by "jumps", until the hands return to the position 60 (vertically up).
3. Press and hold the button **B**, the hands will start moving clockwise fast. Then, start pressing the button **A** by "jumps", until the hands return to the position 60 (vertically up).
4. Push the crown in to the position **1**.

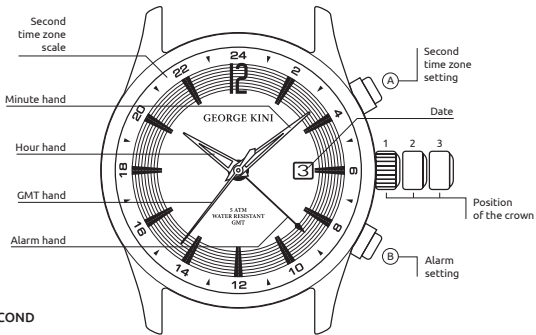

**MODELS
WITH THE SECOND
TIME ZONE**

MODELS WITH THE SECOND TIME ZONE

To set time:

1. Pull the crown, bring it to position **3**.
2. Rotate the crown clockwise until the minute and second hands are showing the correct time.
3. Push the crown in to the position **1**.

To set the date:

1. Pull the crown, bring it to position **2**.
2. Rotate the crown clockwise until the display shows the correct date.
3. Push the crown in to the position **1**.

To ensure that the date will advance correctly, bring the crown to the position **2**. Rotate the crown clockwise until the display shows yesterday date. Then, bring the crown to the position **3** (time setting) and move the hands until the date is correct.

Move the hands till the moment when both date and time are correct.

PLEASE NOTE:

If you do the settings of the watch after 12pm, make sure that you have completed the rotation and passed 12 hours index. Otherwise the date will change at midday instead of midnight.

PLEASE NOTE:

To avoid the damage of the movement, please do not set the date between 23:00-4:00.

To set the alarm:

1. Pull the crown, bring it to position **2**.
2. Rotate the crown counterclockwise to set the alarm hand at correct time.
3. Push the crown in to the position **1**.

The alarm function:

Press the B button to turn on / off the alarm. Double signal means the alarm is on, when turned off – single.


The alarm will sound in the within 15 seconds. To disable alarm, press button **B**.

**To set the second time zone
(GMT function):**

1. Pull the crown, bring it to position **2**.
2. Press the **A** button and hold until the GMT hand reaches the desired time. The second time zone is show on the outer part of the dial (24 hours).
3. Release the **A** button.
4. Push the crown in to the position **1**.

PLEASE NOTE:

The GMT hand makes one full turn per day and has its own 24-hour scale. Each pressing the GMT button makes a step in 5 minutes, therefore, 12 clicks for one hour. When holding the button pressed, the hand moves smoothly, without stoppings.

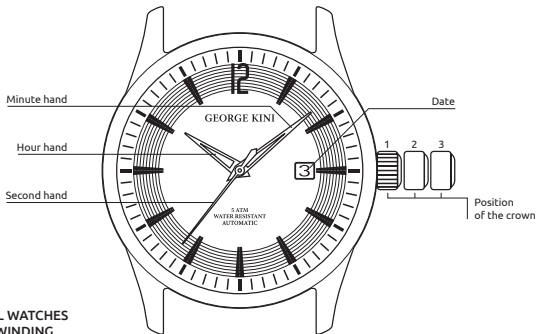

**MECHANICAL WATCHES
WITH AUTO WINDING**

MECHANICAL WATCHES WITH AUTO WINDING

To manually wind an automatic movement:

1. Pull the crown, bring it to position **2**.
2. Turn the crown 25-30 revolutions.

To set time:

1. Pull the crown, bring it to position **3**.
2. Rotate the crown clockwise until the minute and second hands are showing the correct time.
3. Push the crown in to the position **1**.

To set the date:

1. Pull the crown, bring it to position **2**.
2. Rotate the crown counterclockwise until the display shows the correct date.
3. Push the crown in to the position **1**.

PLEASE NOTE:

To avoid the damage of the movement, please do not set the date between 23:00-4:00.

CONDITIONS OF WARRANTY MAINTENANCE

Warranty period is 24 months from the date of purchase. The seller guarantees correct work of the watch during this period of time if all the requirements described in the manual and if the watch was demanded for personal use only (not related to professional or business activity) and for its intended purpose. During the warranty time the product defects occurred through the fault of the manufacturer can be eliminated free of charge in the warranty service center, specified in this card, if all three

the product, the warranty card and the document, confirming the purchase of a product will be presented. If there is no listed in the card service center in the region, where the product was purchased, the watch can be transferred to the shop, and further to the service. Deadline for elimination of deficiencies product is determined by the service center individually and is no more than 45 days from the receipt of the product from the buyer. Warranty is extended for the time the product is in the service center. The opening of the watch or attempting to repair the product on any cause out of warranty service entails a single cancellation of this warranty.

During the warranty period is allowed and is not a defect:

1. The discharge of the battery installed in the product by the manufacturer. Replacement of the battery in warranty period should be carried out only in warranty service center for buyer's account;
2. Worn (broken) strap, bracelet, clasp, watch case (full or partial), buttons, crowns or coating (gilding, metallization, etc.) in the process of usage;
3. Mismatch of hour and minute hands less than 0.5 minute division (when combined in position 12-00);
4. The deviation of the second hand from marks on the dial less than 0.5 second division;
5. Hour and minute hands loopholes within 0.5 second division for quartz models;
6. Deviation of the average daily accuracy of automatic watches less than -20 / + 40 seconds per day. Average monthly deviation accuracy of the quartz movements less than +/- 20 seconds per month.

The guarantee does not cover:

1. Products that have traces of violation of the operational rules:
 - Traces of bumps and mechanical damage: dents, jagged, bounced hands, the absence or deformation of the crown of a watch, etc. ;
 - Traces of unauthorized opening of the watch outside the warranty service center (scratches on the case at the junction with the back cover, damaged splines screws, fingerprints inside movements, non-standard batteries, etc.);
2. Damage (internal or external) caused by any external mechanical impact, shock or vibration loads, the use of external force to parts of the product: broken or fallen glass, cracks, scratches, scuffs, chips, deformation of materials and parts, scrapping or bending of the transfer axle heads, curvature of wheel axles and balance, deformation of platinum, rupture or stretching of parts, detachment of the lugs of the case for fastening bracelet, etc.;

3. Damage of the watch with water in result of violation of the operational rules. Watch with notation «Water resistance» and «Water resistance 30 m» are not intended for swimming. It is prohibited to act on the crown or buttons while the watch is in the water;
4. Damage caused by ingress of caustic chemicals or solvents: alkali, acids, mercury and its vapor, solvents of plastics, etc.;
5. Damage to products due to ingress of external objects, substances or insects;
6. Damage to the calendar movement because of inappropriate settings of date or day of the week by the

user, between 23:00 and 04:00 (when engaged automatic mechanism date changes);

7. Other damage caused by willful or reckless actions of the buyer or violation of the operational rules.

This warranty card is valid only for the product, for which is written out. A coupon with an empty seat unintelligible filled with graphs of characteristics of the products, with corrections in graphs or without the buyer's signature is considered invalid. In disputable cases about the cause of defects, it is necessary to receive service center or the Independent expertise.

Model

Reference

Date of purchase

Authorized dealer

STAMP

THE GUARANTEE
IS INVALID WITHOUT
SHOP'S STAMP

I confirm that the product is checked in my presence, has no damage and is operable. I have read and agree with instruction, operating rules and the terms of the guarantee.

Buyer's signature

Date of receipt	Date of issue	Service description	Master

Manufacturer: GEORGE KINI SRL

Via dell'Industria, 4

47843, Misano, Adriatico (RN)

Italy

info@georgekini.com

INTERNATIONAL SERVICE CENTER

You can find authorized service center

details in your country on website

www.georgekini.com

GEORGE KINI